PARTS LIST				
Α	FRAME	3 no.		
В	TOP	1 no.		
С	BENCH	2 no.		
D	M10 X 110mm BOLT	18 no.		
Е	WASHER	18 no.		
F	NUT	18 no.		
G	CAP	48 no.		


TOOLS
17mm SPANNER
RUBBER MALLET

Begin assembly with the table top upside down on a smooth clean surface.

Lower the pre-assembled frames onto the table top assembly.

Using the supplied M10 x 110mm coach bolts. Fit the bolts through the table/leg hole with the washer and nut.

Do not fully tighten at this stage.

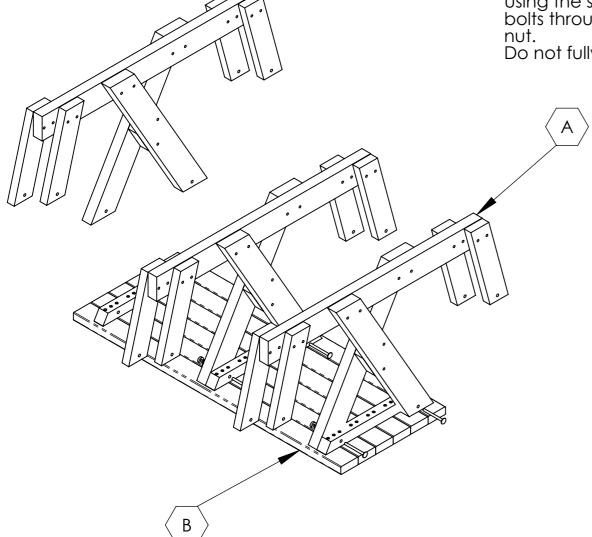

Flip the table the correct way up.

Lower the pre-assembled bench onto the frame and align the holes on the bench blocks with the holes on the frames. Use the provided bolts to secure in place.


The nuts & bolts on the frame located at the base of the bench leg can be loosened to aid fitting.

## **IMPORTANT**

Ensure you are familiar with these instructions prior to commencing assembly.

Employ correct lifting procedures when handling.

Lifting requires 2 people.

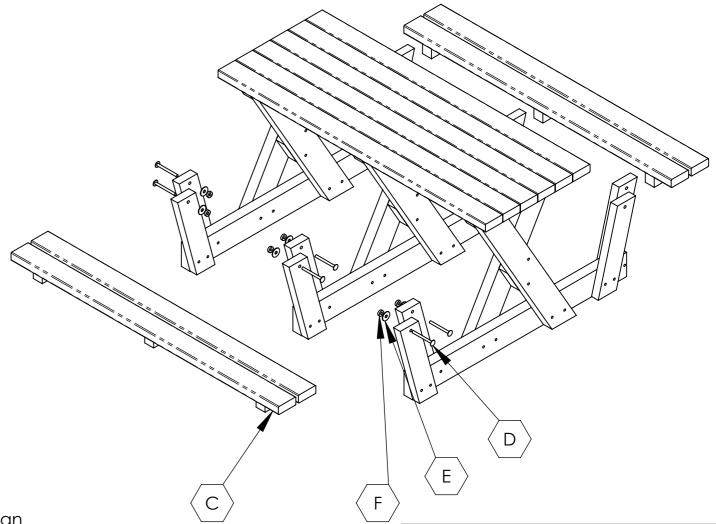

 DRAWN
 AC
 12/10/22

 SW-DWG NAME:
 WTPT 100A

Assembly Instructions - Page 1

DWG NO. REVISION

EA2200534 1


SHEET 1 OF 2

Walkthrough Picnic Table 1.5m

Earth Anchors Ltd


Once both benches have been fitted all the nuts can be tightened, starting with the underside of the table top, then the benches.

Fit the caps provided on all bolt ends except for those under the bench assembly.

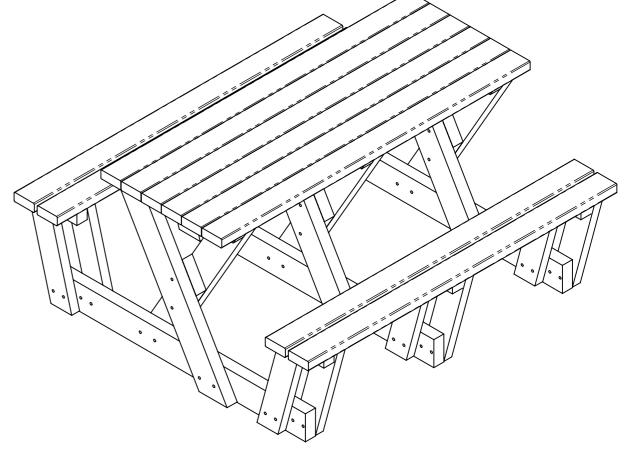

## Note:

The benches have offset blocks. If the frame is protruding out further than the bench. Flip the bench assembly 180°

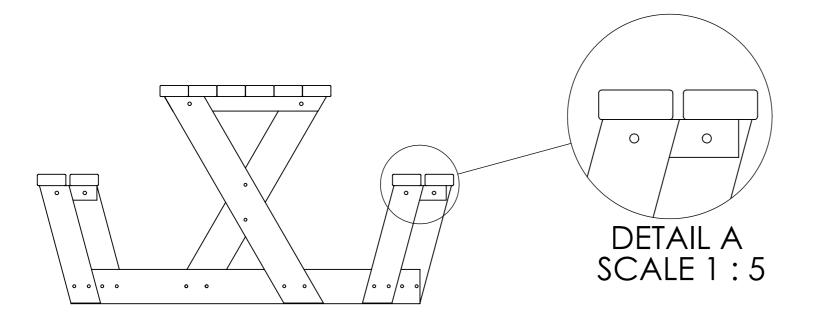

## Earth Anchors Ltd

TITLE:

Walkthrough Picnic Table 1.5m

Assembly Instructions - Page 2

	NAME	DATE	
DRAWN	AC	12/10/22	1
SW-DWG NAME: WTPT_100A			-

DWG NO. EA2200535

SHEET 2 OF 2

REVISION