INSTALLATION INSTRUCTIONS
BENSHAM LITTER BINS

DOC REF: 412 ISSUE 02

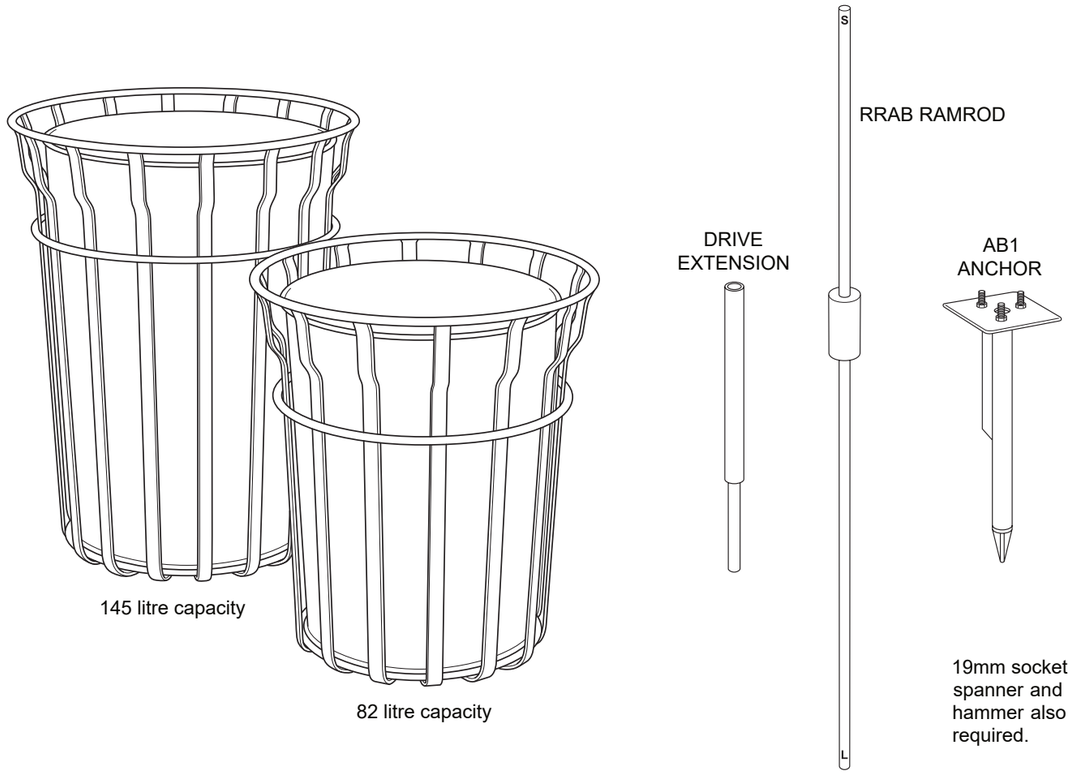

1

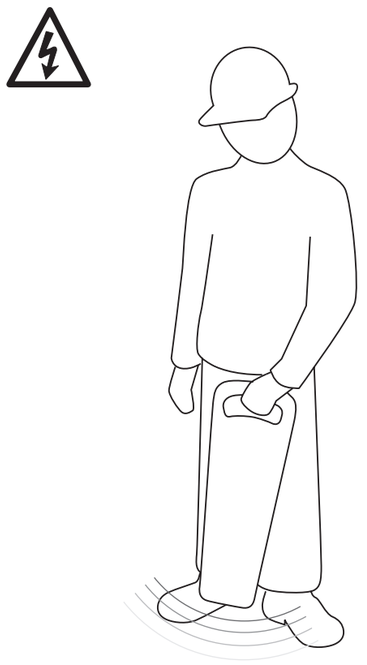

Always check for buried services

2

Insert the drive extension into the anchor.
Insert the **Short end** of the ramrod into the anchor through the drive extension.

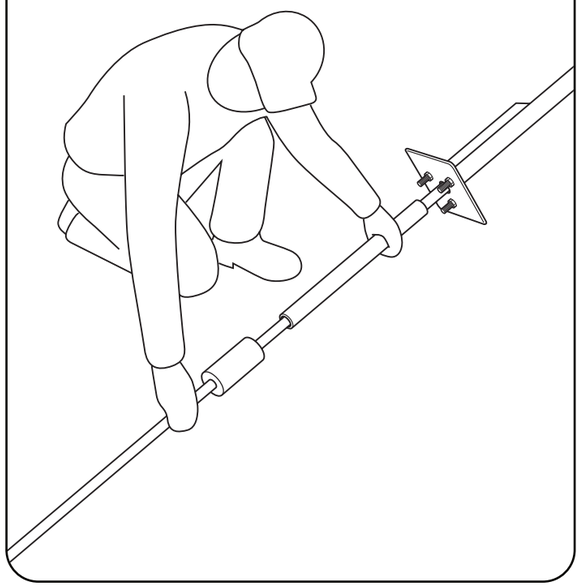

3

ANCHORING
Turn upright and position the anchor where it is required. Lift and ram down the ramrod until the top plate is fully bedded on the ground.

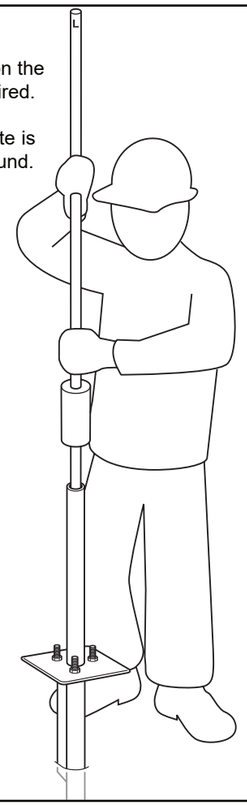

4

DRIVING THE ANCHOR FLUKE
Reverse the ramrod and insert the Long end. Lift and ram down the ramrod to drive out the fluke.

Remove the ramrod and drive extension.

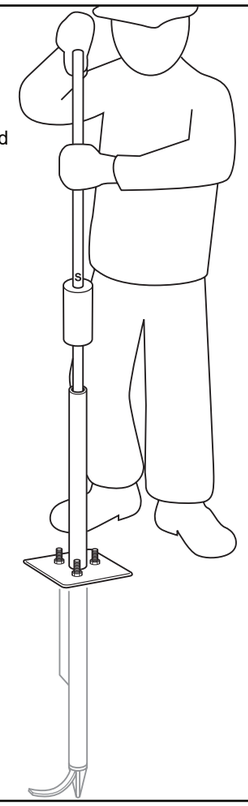

5

SECURING THE BIN
Locate the bin over the four bolts in the baseplate.

Use supplied washers, under the bin baseplate, to ensure the bin is vertical.

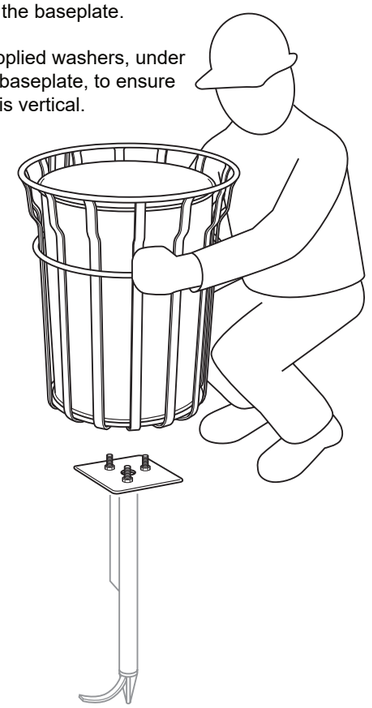

6

FINAL ASSEMBLY OF THE BIN
Fit the bin over the three bolts in the anchor baseplate. Next fit another washer followed by the hexagonal nut and tighten fully.

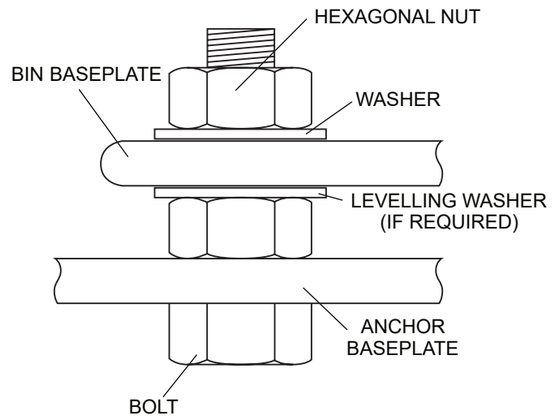

Earth Anchors Ltd
Unit 3 Io Centre, Salbrook Road Industrial Estate, Salfords, Surrey, RH1 5GJ
Tel: 020 8684 9601
www.earth-anchors.com

DOC REF: 412 ISSUE 02